

Solenoid valves and pilot group in IP 65 manufacture

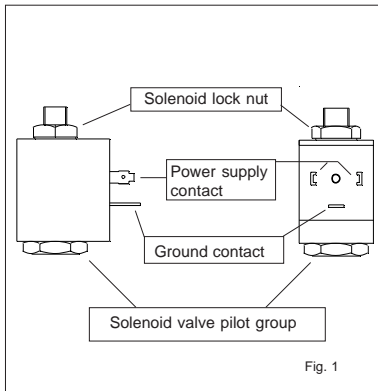


Fig. 1

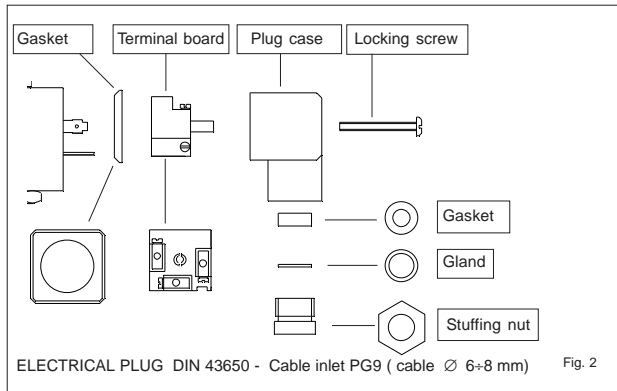


Fig. 2

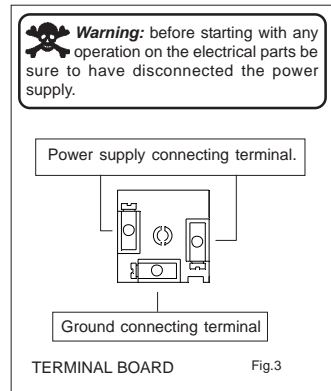


Fig. 3

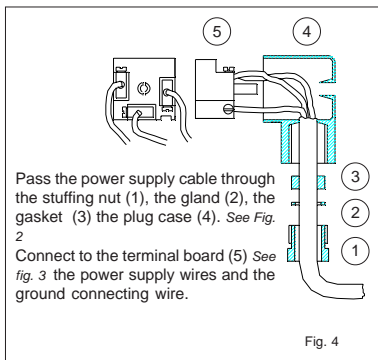


Fig. 4

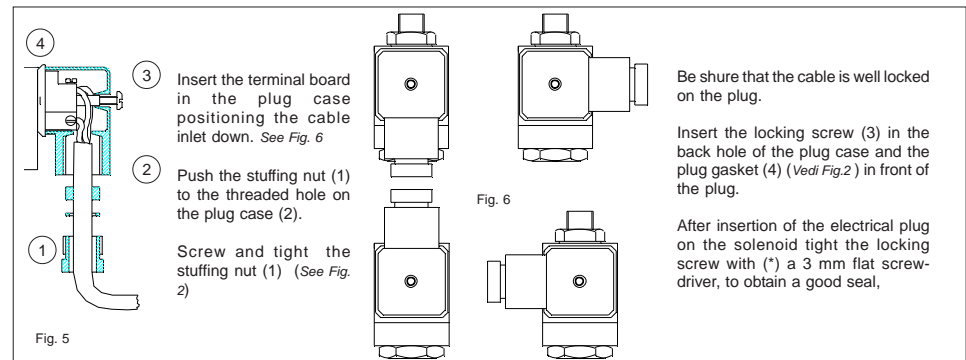


Fig. 5

Fig. 6

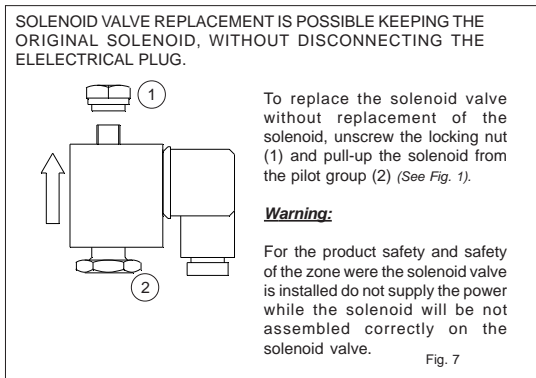


Fig. 7

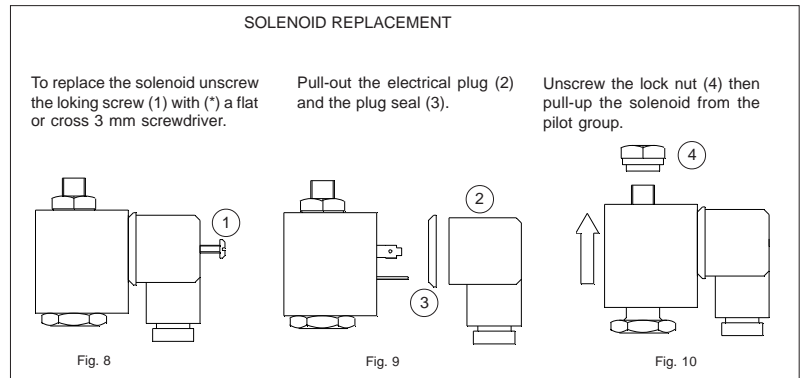


Fig. 8

Fig. 9

Fig. 10

DO NOT SUPPLY THE POWER UNTIL THE FOLLOWING OPERATIONS AND CHECKS WILL BE SUCCESFULLY MADE.

- CHECK THAT THE VALUE OF THE POWER SUPPLY INDICATED ON THE RATING LABEL AND THE MAIN POWER THAT WILL SUPPLY THE VALVE ARE COMPATIBLE.
- CHECK THAT THE SOLENOID IS WELL POSITIONED AND LOCKED.
- CHECK THAT THE POWER SUPPLY WIRES AND GROUND CONNECTING WIRES ARE CORRECTLY MOUNTED AND TIGHT ON THE TERMINAL BOARD.
- CHECK THAT THE POWER SUPPLY CABLE IS LOCKED IN POSITION BY THE STUFFING NUT.
- CHECK THAT THE PLUG SEAL IS CORRECTLY MOUNTED AND THE CONNECTOR IS FIRMLY LOCKED ON THE SOLENOID BY THE LOCKING SCREW.
- CHECK THAT THE ELECTRICAL PLUG IS POSITIONED WITH THE CABLE INLET DOWN.