

Solenoid Valve - 3/2 - Normally Closed

Benefits & Features

- Water, air, general fluids etc
- Media temperature: -15°C to +130°C
- Three way normally closed
- Brass body
- IP65 safe area

Specification

Configuration	Direct acting
Port Sizes	1/4" BSP/NPT
Orifice	see table below
Kv	see table below
Body	Brass, 316 stainless steel
Media	Air, water, liquids etc. Subject to material compatibility
Pressure ranges	see data table below
Seals	see order codes table



Technical Data

							Port Size BSP	Orifice mm	Min. / Max. Operating Differential Pressures. Bar			KV Flow Factor L/min.
	A		B	C	D	E			Min.	Maximum		
										AC	DC	
C02		18					¼"	1.8	0	10	10	1
C02		25					¼"	2.5	0	8	8	1.6


Order Codes

A	Body	B	Port		C	Seals (fluid temp. min / max)	D	Protection	E	Options	
I	316 Stainless Steel	C	1/4" BSP	D	1/4" NPT	0	NBR (-10°C to + 70°C)	P	IP65	X	Manual Override
T	Brass	Vent: 1/8" BSP				1	VITON (-10°C to + 90°C)			/SG	Degreased for Oxygen Service
						6	EPDM (-10°C to + 90°C)				

Solenoid Valve - 3/2 - Normally Closed

Weights & dimensions

Weight Kg	Dimensions mm				
	A	B	C	D	E
0.3	50	10.5	91	30	54

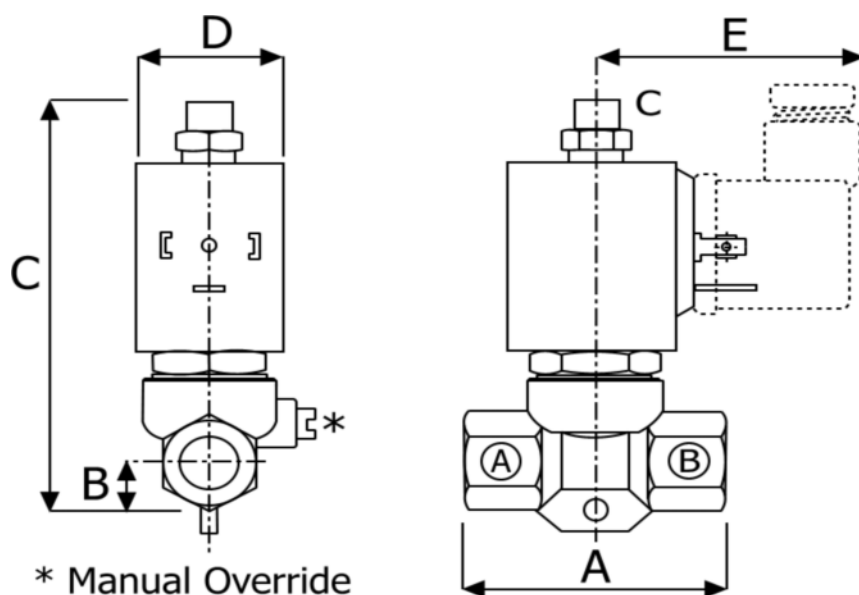


Seal Kits


Seal Material	Port Size (Brass Body)	Port Size (Stainless Steel Body)
	1/4"	1/4"
NBR	KGIP/C02T.0	KGIP/C02I.0
VITON	KGIP/C02T.1	KGIP/C02I.1
EPDM	KGIP/C02T.6	KGIP/C02I.6

Body Mounting Bracket 4661

Weight Kg	Dimensions mm	
	Width	Depth
0.01	18	12

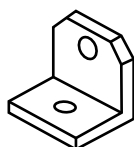

DIN electrical socket connectors to protect solenoid coil terminals and wiring.

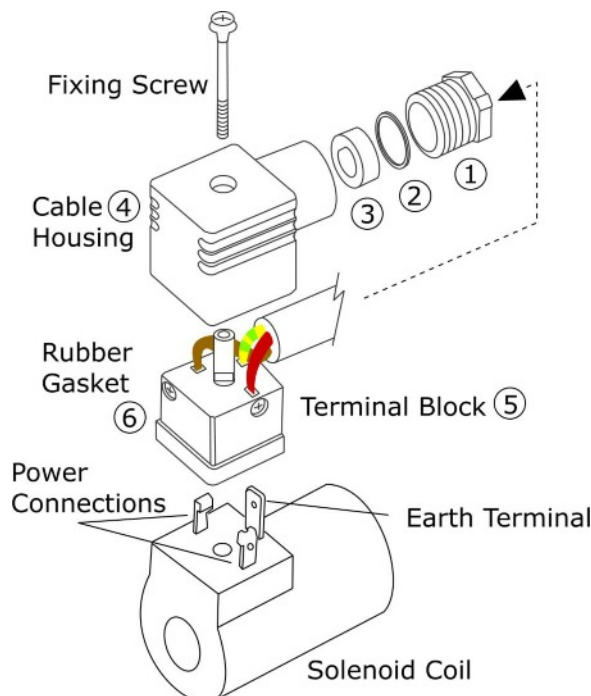

Section 1: DIN Connector Assembly

- Insert the electrical power cable through the gland assembly (1,2,3)
- Push the cable through cable housing (4)
- Connect power and earth cables to terminal block 5
- Push terminal block (5) backwards, inside cable housing (4)
- Place rubber gasket (6) on terminal block (5) front face
- Push terminal block onto solenoid coil terminals
- Push fixing screw through complete assembly
- Tighten fixing screw with small screwdriver
- Do not over tighten
- Tighten cable gland (1,2,3) by hand

Section 2: How to install Solenoid Valves

Solenoid Valves can normally be installed and operate in any orientation. However, certain models are designed to operate in horizontal installations. Please contact Red Dragon for further information.

Installation Procedure:

Check that the Solenoid Valve is the correct product ordered for the application:

- Isolate the site electrical power supply
- Isolate the site media supply (dependant on the application)...air, water, steam etc. Leave until cool/safe.
- Insert the valve onto the pipe, ensuring that the flow direction is observed.....IN for incoming media, or an arrow stamped on the valve body.
- Ensure that the pipe connections are free from burrs or loose pipe thread tape
- Tighten all pipe joints
- Connect electrical power supply via DIN electrical socket connector, as detailed in section 1
- Ensure that DIN connector is properly connected to solenoid coil and the gasket is installed correctly
- Apply media pressure and check for leaks

Section 3: Maintenance Procedure for Solenoid Valves

In the unlikely event of a valve malfunction, or routine maintenance, follow these instructions:

- Isolate the site electrical power supply
- Isolate the site media supply (dependant on the application)...air, water, steam etc.
- Remove the solenoid coil by unscrewing the coil retention nut anti-clockwise
- Remove the coil tube stem by unscrewing anti-clockwise
- Carefully remove the plunger assembly (inside the coil stem)
- Check the plunger assembly for damage or worn seals
- Check the face inside the coil stem for foreign particles that could prevent correct operation
- For Pilot Diaphragm Solenoid Valves: remove the top cover housing and check the diaphragm for damage and blocked transfer port.
- Re-assemble the valve in reverse order, ensuring that all parts are cleaned and assembled correctly